



**STOP!**  
**PLEASE READ ME FIRST!**



## External\* Fluoride-Arsenic Shield Filter Installation Instructions

**PLEASE FLUSH FILTER  
PRIOR TO INSTALLING WITH IONIZER**

1. Place the External Fluoride cartridge into the housing.
2. Close and tighten the lid.
3. Connect one 1/4" water line to your source water supply.
4. Connect other end of 1/4" water line to (IN) connection of the External Housing.
5. Connect second 1/4" water line to the (OUT) connection of the External Housing.
6. Flushing Process: Turn on the source water and begin flushing the External Fluoride filter allowing the water to drain into either the sink or a 5-gallon bucket. (Allow the filter to Flush for approximately 3-5 minutes or until the water runs clear.)
7. Once flushing is complete, turn off the water source and disconnect 1/4" water supply connected (OUT) connection.

If you have any questions, please contact Technical Support at [techsupport@alkaviva.com](mailto:techsupport@alkaviva.com) or 775-324-2400 Option 2.

\*This filter requires separate external housing.



**STOP!**  
**PLEASE READ ME FIRST!**



## External\* Fluoride-Arsenic Shield Filter Installation Instructions

**PLEASE FLUSH FILTER  
PRIOR TO INSTALLING WITH IONIZER**

1. Place the External Fluoride cartridge into the housing.
2. Close and tighten the lid.
3. Connect one 1/4" water line to your source water supply.
4. Connect other end of 1/4" water line to (IN) connection of the External Housing.
5. Connect second 1/4" water line to the (OUT) connection of the External Housing.
6. Flushing Process: Turn on the source water and begin flushing the External Fluoride filter allowing the water to drain into either the sink or a 5-gallon bucket. (Allow the filter to Flush for approximately 3-5 minutes or until the water runs clear.)
7. Once flushing is complete, turn off the water source and disconnect 1/4" water supply connected (OUT) connection.

If you have any questions, please contact Technical Support at [techsupport@alkaviva.com](mailto:techsupport@alkaviva.com) or 775-324-2400 Option 2.

\*This filter requires separate external housing.