



The Perfect Pitcher Return Policy

If at any time in the first 14 days you wish to return your Perfect Pitcher, AlkaViva will give you a full refund on the product, cost of shipping will not be refunded

The Perfect Pitcher Warranty

The warranty on the Perfect Pitcher is for 1 year and begins on the original purchase date. The Perfect Pitcher warranty covers all parts and 100% of labor costs due to manufacturing defects only. Customer is responsible for shipping costs both ways unless unit is bad out of the box.

A product of:
AlkaViva, LLC
8745 Technology Way, Suite C
Reno, NV 89521
(775) 324-2400
www.ClubHydrogen.com



Owner's Manual

Perfect Pitcher



**Delicious
Great Tasting
Antioxidant
Energized**

READ ME FIRST!

1. Be sure to flush your filter before using the first time. (See Instructions on Page 1).
2. During normal use, do not let the filter dry out.
3. Pour water from the pitcher *only* when the *top reservoir is empty!*
4. Use on potable water only.
5. Monthly filter replacement is critical to optimal contaminant removal.

Warning: Incorrect installation and/or operation could void your valuable warranty.

Please protect your investment!

READ THIS MANUAL CAREFULLY



Congratulations for choosing the cleanest and healthiest water!

Preparing Your Perfect Pitcher

1. Remove the filter from the protective-wrap.
2. Insert the Perfect Pitcher Replacement Filter into the reservoir and press firmly on the filter to ensure a tight seal. The Perfect Pitcher Replacement Filter will sit up above the bottom of the reservoir. It is designed to do this and will work properly in this position.
3. Fill the upper reservoir with water and let water drain through the Perfect Pitcher Replacement Filter into the bottom reservoir. Pour the water out and repeat until the water is clear. Water in the first few reservoir fills will be gray due to carbon dust. **THIS IS NORMAL!** This process will ensure that the Perfect Pitcher Replacement Filter is thoroughly rinsed and ready for use.
4. Your Perfect Pitcher is now ready to provide clean, contaminant-free water.
5. If you experience slow flow, remove your filter cartridge and shake it until you hear and feel the media loosen. Replace following Step 2.

**You are ready to enjoy the cleanest and
healthiest water available in a pitcher!**

For Perfect Performance

- Change your filter cartridge regularly to get optimum contaminant reduction; every 30 days or 40 gallons, whichever comes first.
- **Keep it full.** To ensure optimum filtration performance of the filter, *do not let it dry out.*
- **Hot water will damage your filter.** Maximum recommended temperature for water is 85° F / 30° C.
- **Use potable water only** - which is suitable for human consumption.
- **Pour when empty.** Pour *only when the top is empty!* Unfiltered water from the top reservoir could mix in with the clean water from the bottom reservoir while pouring.

Maintaining your Perfect Pitcher

- Wash with warm, soapy water and a soft cloth or sponge. Using harsh materials may result in scratches in the finish.
- If your pitcher becomes cloudy from lime-scale, use 50/50 vinegar and water to remove buildup.
- Reset the *Filter Life Indicator* every time a new cartridge is inserted.
- Protect your Perfect Pitcher from freezing temperatures.
- If you plan on not using your Perfect Pitcher for an extended period (more than 3 weeks) remove the filter and store it in a plastic bag in your refrigerator.

Using the Filter Life Indicator

The best way to remember when to change your filter is to get on our Convenience Delivery Program. We will send you a new fresh filter each month. How do you remember when to change the filter? When the new one shows up!

1. To Start the *Filter Life Indicator*

- Press and hold down the Set button for 5-6 seconds. The *Filter Life Indicator* will display:
 - The number 60
 - Days
 - Four bars
 - One small, flashing dot
- The small, flashing dot in the bottom, right corner of the display shows that the *Filter Life Indicator* is working.
- After each day, the number will reduce by one. After each 15-day increment, one bar will disappear.
- Change the cartridge when you have two bars and the number changes to 30.

2. To Reset the *Filter Life Indicator*

- Press and hold down the Set button for 8-9 seconds. The *Filter Life Indicator* will flash three times and will display:
 - The number 60
 - Days
 - Four bars
 - One small, flashing dot