



# Read Me First!!!

## How to Replace Ultra Spartan Filter in External Housing

1. Turn OFF source water.
2. Turn on ionizer momentarily as if getting a glass of water to relieve pressure within the system. Then, turn off ionizer.
3. Open housing by unscrewing lid/cap.
4. Remove expired filter.
5. Place new filter in housing with rubber gasket towards lid/cap.
6. Close and tighten housing using filter wrench to tighten all the way.
7. It is not necessary to flush the replacement Ultra Spartan filter separately.

## How to Use the Ultra Spartan Replacement Filter With Your Old Style Spartan

The old style Spartan is a multi-filter system. With the new Ultra Spartan, you will only need one filter. You can still use your old style Spartan housing. Remove the two expired filters from the Spartan housing. Place the Ultra Spartan replacement filter in the housing closest to your ionizer. The other filter housing will remain empty. Close both housings and tighten completely with filter wrench.

**It is recommended to replace the filter once a year**


**Date Installed:** \_\_\_\_\_



## If Your Old Style Spartan has an EOS Installed on Top, Follow These Steps:

1. Remove the expired EOS, and the short piece of tubing that connected to the port marked "Out" on housing #2.
2. Connect the existing tubing that goes to the tap "inlet" on the bottom of the ionizer, to the port marked "out" on housing # 2

Old style Spartan set up

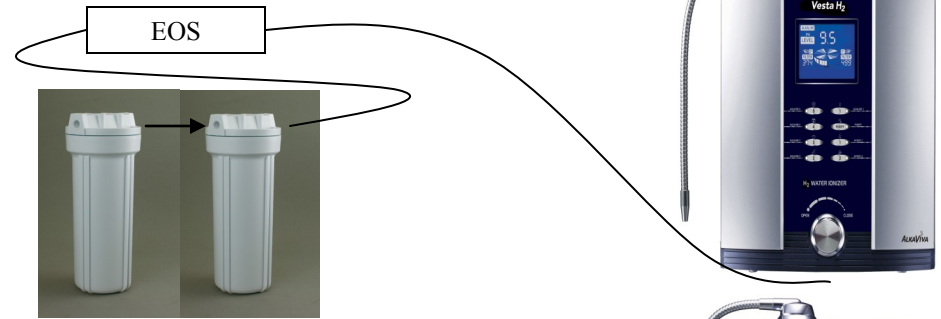

New set up for old style Spartan with Ultra Spartan filter



**For any other questions or help with filter installation please contact Technical Support at [TechSupport@AlkaViva.com](mailto:TechSupport@AlkaViva.com)**

