




Citric Acid Cleaning Filter for the H₂ Series

Cleaning filter will eliminate most mineral scale on the electrodes and inside the chamber of your ionizer allowing for longer life and better performance. It insures that the platinum/titanium plates remain clean and free of scale.

- 
- 
1. Disconnect the electric plug.
 2. Turn off the water supply control valve.

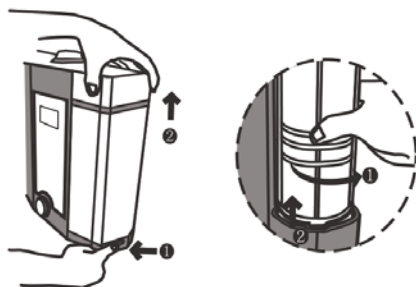

3. Open filter covers. Disconnect wire harnesses, and remove both filters.





Install empty filter on the right side

Install cleaning filter on the left side.



4. Install the cleaning filter and the empty filter per above.



Do not use your regular filters with the cleaning filter. Be sure to use the empty cartridge that comes with the cleaning filter.

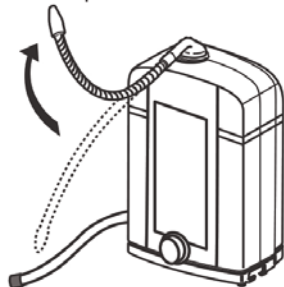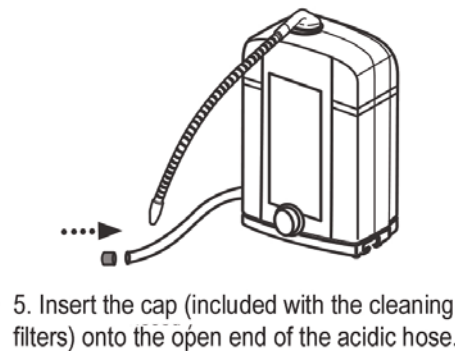

7. Turn on the Flow Control Valve until water drips from the Flexible Stainless Spout. Then turn off the Flow Control Valve and allow the ionizer to sit for 3-5 hours.

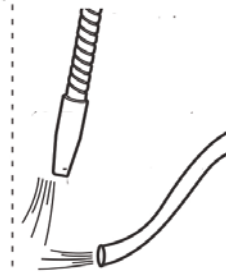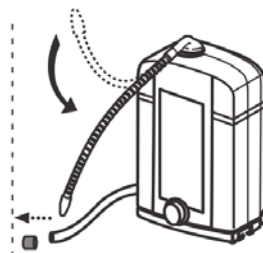

9. Turn on the Flow Control Valve and let water pass freely for about 5-10 minutes.

10. Turn off the Flow Control Valve and replace the cleaning filters with your regular filters. Then let the water run for 2-3 minutes.



11. Close the filter cover and connect the electric power. The cleaning procedure is finished.